

Cobra 36" & 48"

QUICK INSTRUCTIONS




Step 1
Connect the S poles to the Curved pole without caps. Make sure the curved poles curved back towards the S pole, then grab the other curved poles with the caps and connect them going the opposite way from the other poles



Step 2
Grab one of the completed sides and starting from the S pole making your way up, connect the 3 heavy weight poles closest to the S and the lighter weight poles making your way up the Curved poles.



* Make sure that when you screw the screws into the poles that you notice the indents on the S and Curved poles. The head of the screw should fit snug into those grooves.

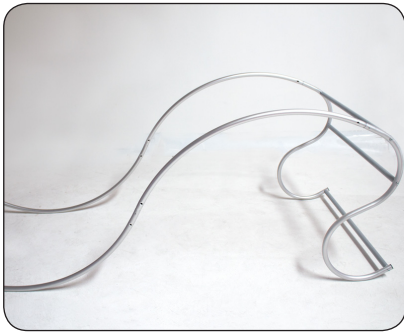

Step 3
Repeat the process on the other side connecting the curved poles to the straight poles.



Step 4
Place your graphic over the frame and your done.

